
Universal

HALF-RAIL TWIN SHOWER

434100

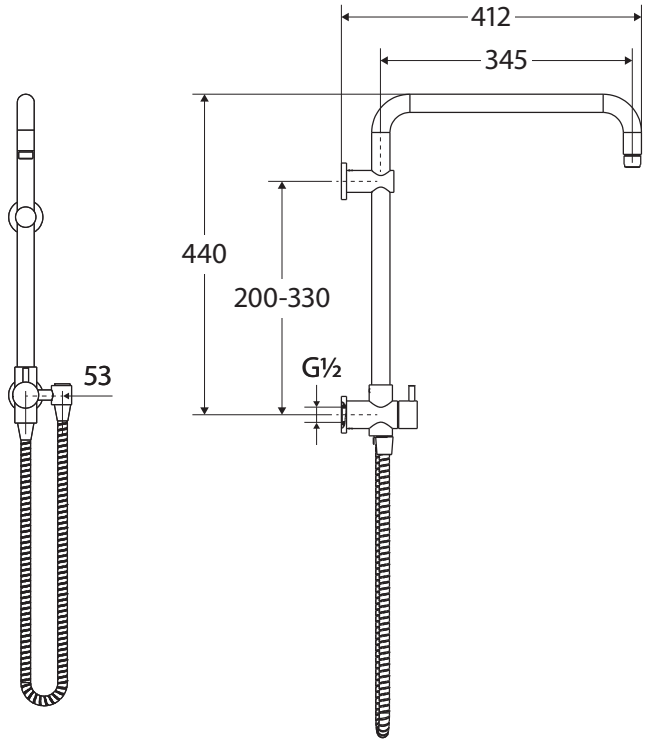

Specifications


Please refer to **fienza.com.au** for the latest product specifications before installing.

Operating Pressure	Min: 150 kPa / 1.5 bar Max: 500 kPa / 5 bar Optimum: 150 kPa / 1.5 bar - 500 kPa / 5 bar Installation of pressure limiting valve recommended if supply exceeds 500kPa
Operating Temp	Hot: Max 80°C Cold: Min. 5°C
Inlet Connections	1/2” BSPP
Hot Water Units	Storage tank and continuous flow only. Not suitable for gravity feed.

General Information

- This product must be installed by a qualified plumber in accordance with AS/NZS 3500 and all applicable local regulations and plumbing codes.
- All pipe work must be thoroughly flushed prior to installation.
- Do not remove the ceramic cartridge from the mixer when installing.
- After installation all hoses and connections must be checked for leaks.
- It is the responsibility of the installer to ensure a waterproof seal is achieved between the product and mounting surface.

IMPORTANT: Please read all of the instructions before installation. Check the product thoroughly for damage. Installation is acceptance of goods supplied and will void warranty. This product is pre-assembled. Do not disassemble, as this may void the warranty.

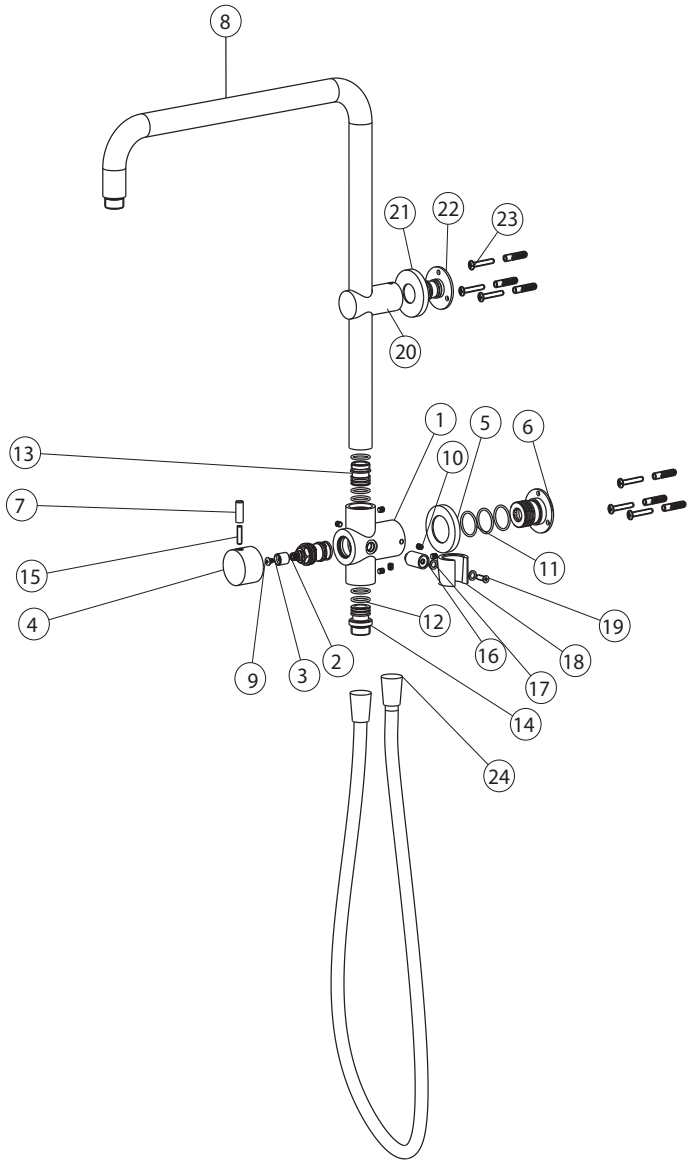


1	Diverter Body	11	27*2mm O Ring	19	M5 Screw
2	90° Diverter Cartridge	12	21*2mm O Ring	20	Fixing Base
3	Connector	13	Connector	21	Flange
4	Brass Handle	14	G½ Connector	22	Fixing Plate
5	Flange	13	Connector	23	Parts
6	Fixing Plate	14	G½ Connector	24	1.5mm SS Hose
7	Round Handle Rod	15	M5*20 Screw		
8	Arm	16	Connector		
9	M4*7 Screw	17	Wearing Ring		
10	M5*6 Screw	18	Sliding Fixing Base		

Installation

IMPORTANT:


- Before commencing installation, turn off the water supply. While not essential, we recommend fitting isolation valves to both hot and cold-water supply.
- Some shower heads only operate correctly when hot and cold water supplies are both mains pressure and may not be suitable for some instantaneous hot water services.
- When water pressure is in excess of 500kPa a pressure limiting device is required.
- Some showers may not provide an effective shower when used with gravity fed heated water systems or where pressures are less than 150kPa at the outlet. Additionally, showers with flow rates of less than 9L/min may not allow the following to function correctly:
  - Some instantaneous water heaters
  - Some tempering valves
  - Some thermostatic mixing valves

1. Install a ½" male threaded connection at the recommended height on wall, ensuring that a minimum of 13±2mm of thread protrudes past the Finished wall. Correct water proofing must be applied.

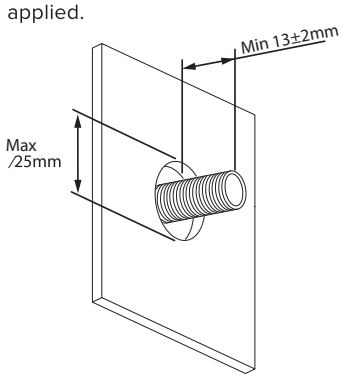


Note: Water Inlet position will be determined by desired overhead shower height.


2. Apply thread tape (or similar) to the ½" connection, then screw the top rail connector to the connection.

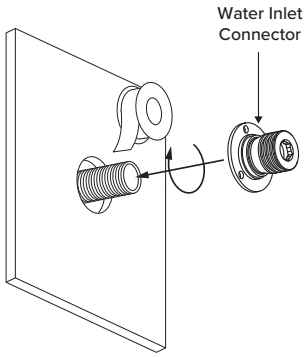


3. Screw the bottom rail connector to a wall stud making sure it is vertically in line with the top rail connector. Maximum centre distance between the top and bottom shower connections is 330mm.

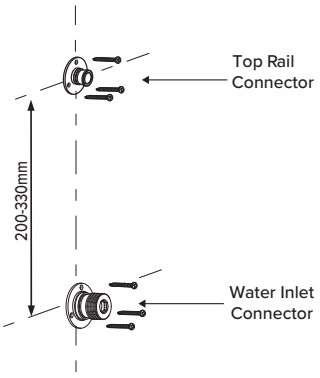


4. Check the grub screws are wound tight. Push the rail brackets onto the top and bottom rail connectors until they are against wall. Secure with grub screws.

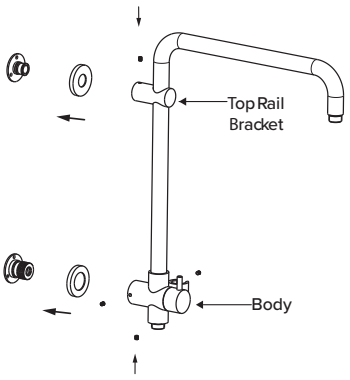

5. Remove the protective cap from the showerhead ball joint and screw the unit onto the overhead arm ensuring the filter washer is in place.
This arm is not adjustable.

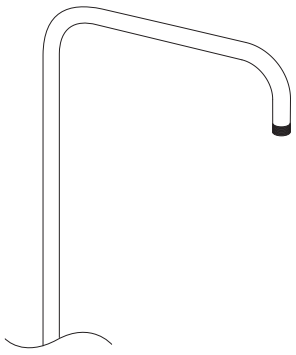

6. Make sure a washer is in both ends of the hose. Screw hose onto lower outlet on rail , attach handset and place firmly in holder. Tilt and rotate head to the desired position.

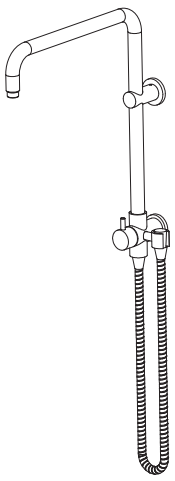

Warranties

At Fienza we pride ourselves on supplying products of a high standard.
Our warranty periods are extremely competitive and practically designed to give the end user peace of mind. Our dedicated After Sales Service and Warranty team are here to help both retailer and end user customers.

Scan the QR code or visit **www.fienza.com.au/warranty/** for residential and commercial warranty terms and conditions.

Full Warranty Terms

PLEASE LEAVE THIS MANUAL WITH THE END USER

Updated: 16/01/26

For more information, contact us or visit our website:
(07) 3490 6700 | help@fienza.com.au | fienza.com.au