


Installation Diagram (FRAT500)

Step 1: Install sink using included clipping system.

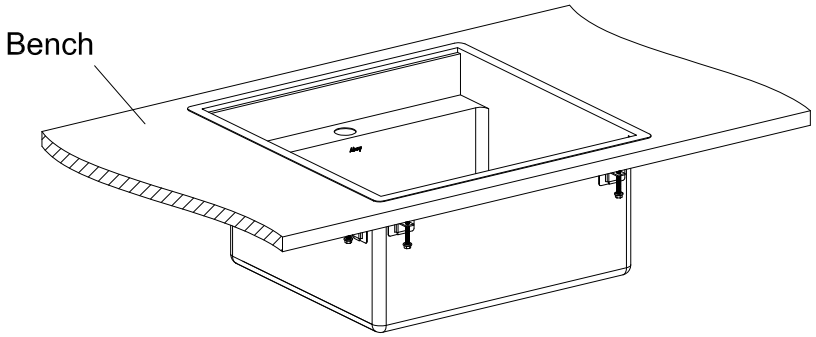

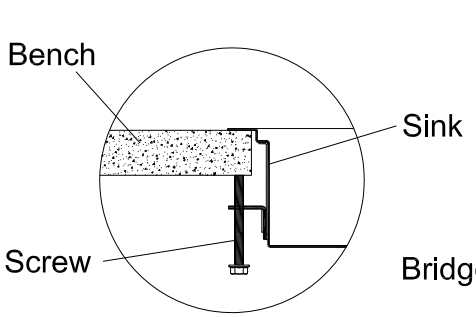

Inset clips instruction (ICM)

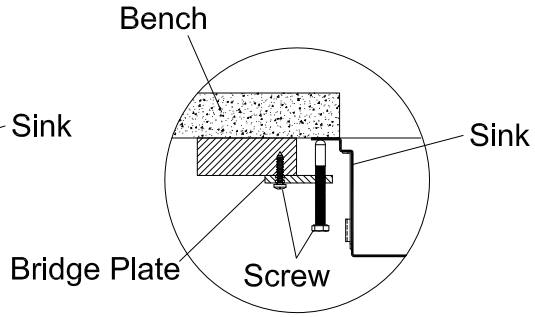

Undermount clips instruction (UMC)

Step 2: Use Abey Tap Installation Manual for KTA035-316.

