caroma


Opal Sole 550


Ceramic
Semi Recessed Basin

200mm 100mm 0
Scale

Position of D.250 Bracket

Back

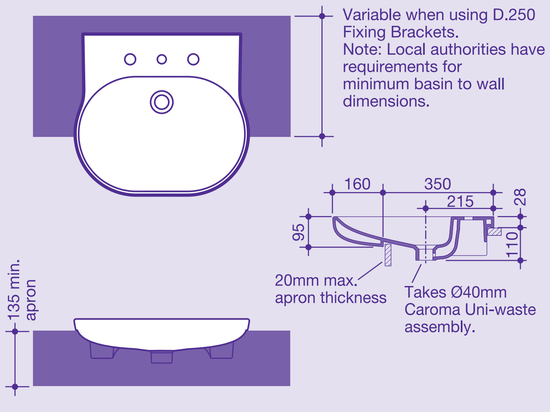

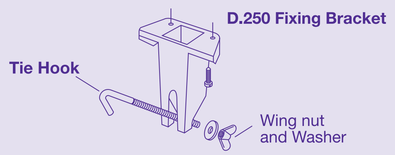

Installation must be in accordance with AS/NZS 3500.2

PLUMBERS INSTALLATION INSTRUCTIONS

1- Fold template and place over countertop and apron.

2- Attach template cut-out guide to countertop with adhesive tape or otherwise transfer cut-out line to countertop.

3- Cut out countertop with care.

4- Fit taps and waste assembly to basin.

5- Apply a layer of acetic cured silicone sealant around the sealing rim and apron.
Important: do not use epoxy sealants.


6- Align and secure the brackets to the underside of countertop in the corner positions as shown.

7- Attach the Tie Hooks to the holes in the basin and lower into opening. Secure from underneath.

IMPORTANT :
EPOXY TYPE GLUES MUST NOT BE USED.

NOTE :
FOR GRANITE OR MARBLE TOPS, FIX TWO 20MM THICK WOODEN BLOCKS IN THE BRACKET POSITION ON THE UNDERSIDE OF THE GRANITE/MARBLE WITH FAST SETTING TWO PART EPOXY. WHEN FULLY SET SCREW THE BRACKETS INTO POSITION ON THE WOODEN BLOCKS.
OTHER SUITABLE FASTENING SYSTEMS MAYBE USED.

IMPORTANT-
PLEASE NOTE: THE TEMPLATE FOLD LINE BETWEEN THE HORIZONTAL AND VERTICAL SURFACES MUST REMAIN AS A SHARP RIGHT ANGLE. ROLLING THE TEMPLATE OVER A RADIUS MAY CAUSE THE CUT OUT TO BE TOO BIG FOR THE BASIN

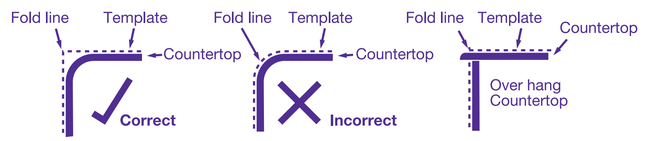

For over hang Countertop situation, position the template fold line on the countertop and apron as detailed.

Basin rim

Counter apron (vertical surface)

Countertop (horizontal surface)

Fold

Fold

Cut-out template

Front

999874CIL

13.06.23
Issue No: 3