

Dolce II
Twin Shower

Nero

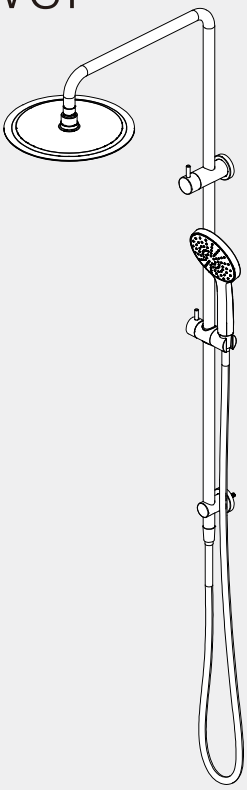

Version : 202510

Drawing

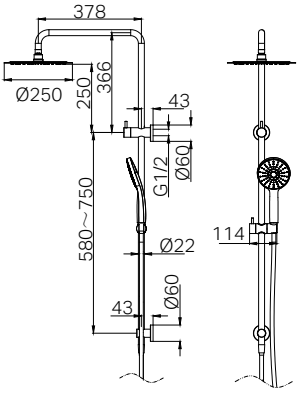

Specifications

Watermark License
WM-060093
Temperature Rating
Min 1°C–Max75°C
Pressure Rating
Min 150kpa - Max 500kpa

PackageIncludes

1 x Hand Shower
1 x Shower Head
1 x Shower Rail
(Built-in Dual-Check Valve)
1 x 1.5m Shower Hose

Finish & SKU

- **Chrome** NR232105gCH
- **Matte Black** NR232105gMB
- **Gun Metal** NR232105gGM
- **Brushed Gold** NR232105gBG
- **Brushed Nickel** NR232105gBN


*Dimensions are nominal measurements only.

INSTALLATION INSTRUCTIONS


GENERAL INSTRUCTIONS:

- This product must be installed by a licensed plumber. Ensure that your plumbing installation complies with the Australian/New Zealand Standard AS/NZS 3500.
- All pipework must be thoroughly flushed prior to the installation of the shower. In-line filters must be fitted on both hot and cold supplies to prevent foreign particles from damaging the shower components.
- Ensure that all outlets used for personal hygiene deliver water at a safe temperature in accordance with regional regulations.
- Verify that the water pressure is within the recommended range for the shower to function properly.

PARTS NAME

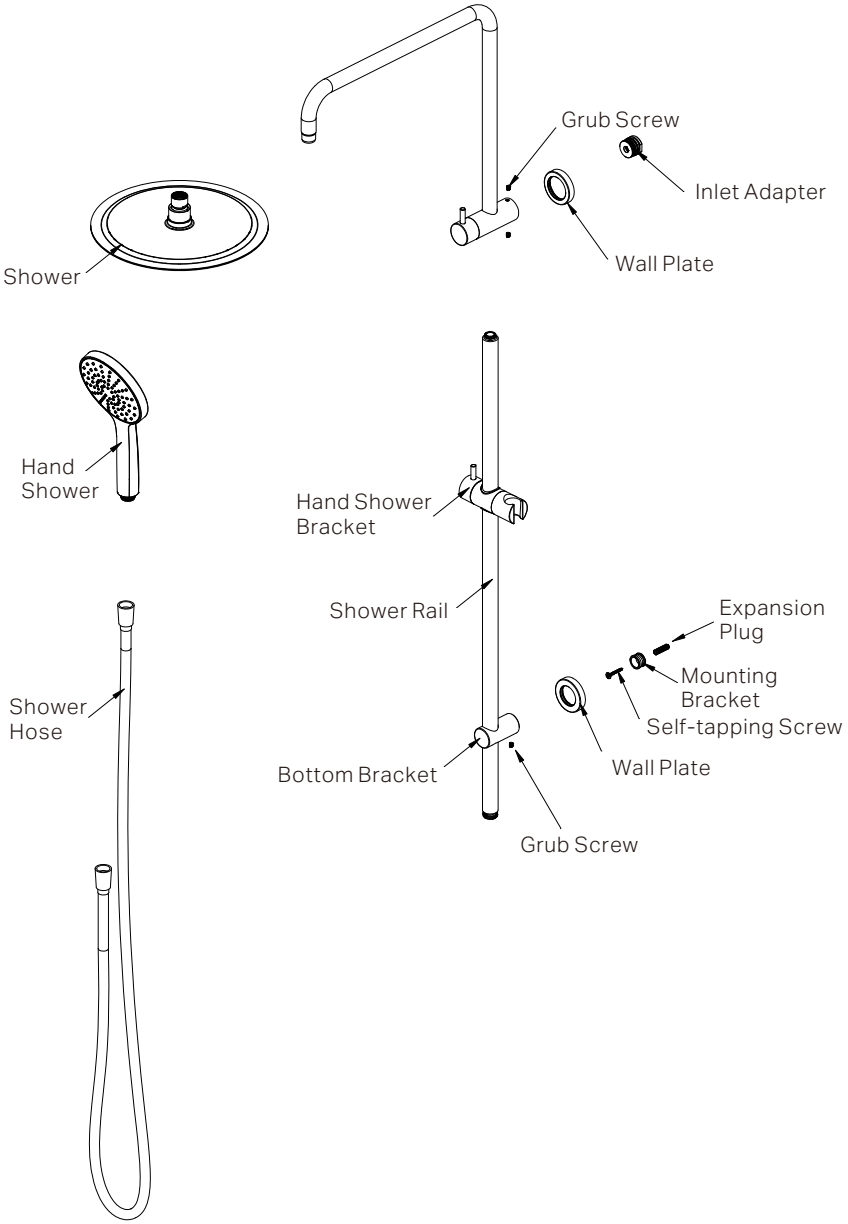
Grub Screw
Inlet Adapter
Wall Plate
Shower
Hand
Shower
Hand Shower
Bracket
Shower Rail
Expansion
Plug
Mounting
Bracket
Self-tapping Screw
Wall Plate
Shower
Hose
Bottom Bracket
Grub Screw

INSTALLTION STEPS

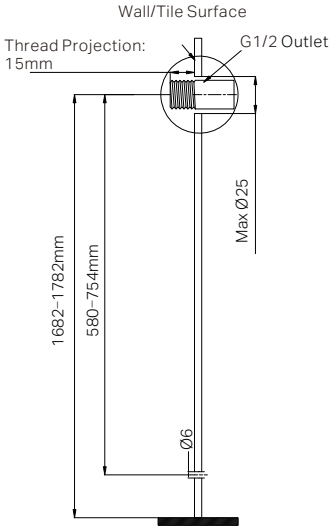


1. Drill a Ø6mm mounting hole 580–754 mm directly below the outlet connector.






2. Apply PTFE tape to the outlet thread to ensure a watertight seal.
Screw the inlet adapter onto the outlet, and secure the mounting bracket to the wall using expansion plug and screw.

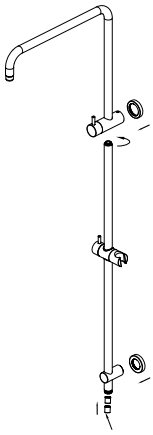


Dual-Check Valve Built in

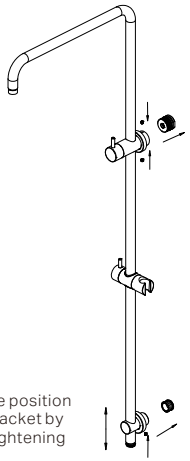

NOTE: Adjust the position of the bottom bracket by loosening and tightening the grub screw.

3. Screw the shower rail into the diverter bracket. Slide back plates into diverter bracket and the bottom bracket.

4. Align the diverter with the inlet adapter and the bottom bracket with the mounting bracket, then secure the shower rail to the wall using grub screws.

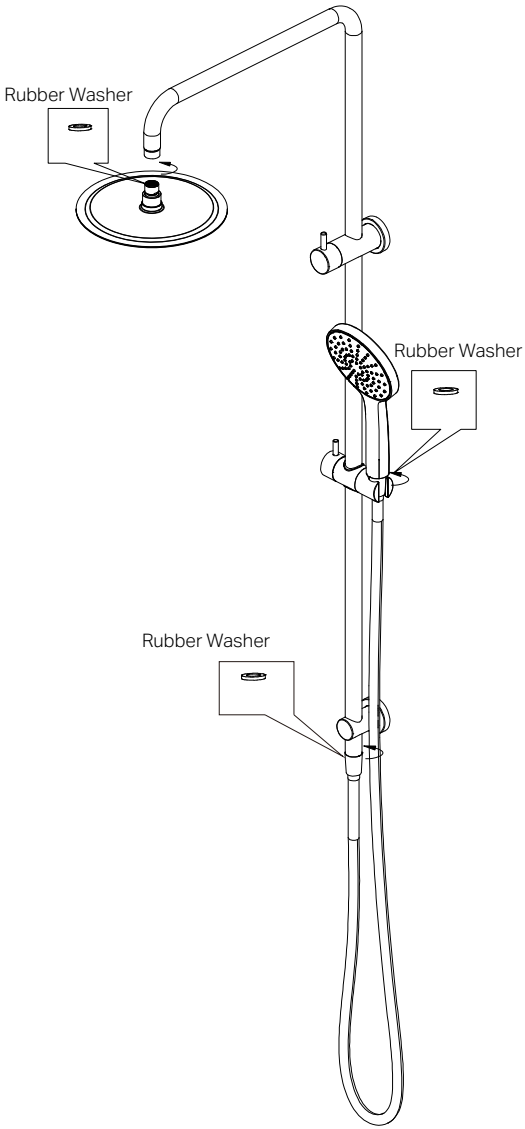

5. Screw the overhead shower into the shower arm,ensuring a rubber washer is in place for watertight seal.
6. Connect one end of the hose to the bottom of the shower rail and the other end to the hand shower.
Ensure the rubber washers at both ends are not lost during installation.

FINAL INSPECTION
Switch on the water supply and check for any leakage at the joints.

Nero



Warranty Policy