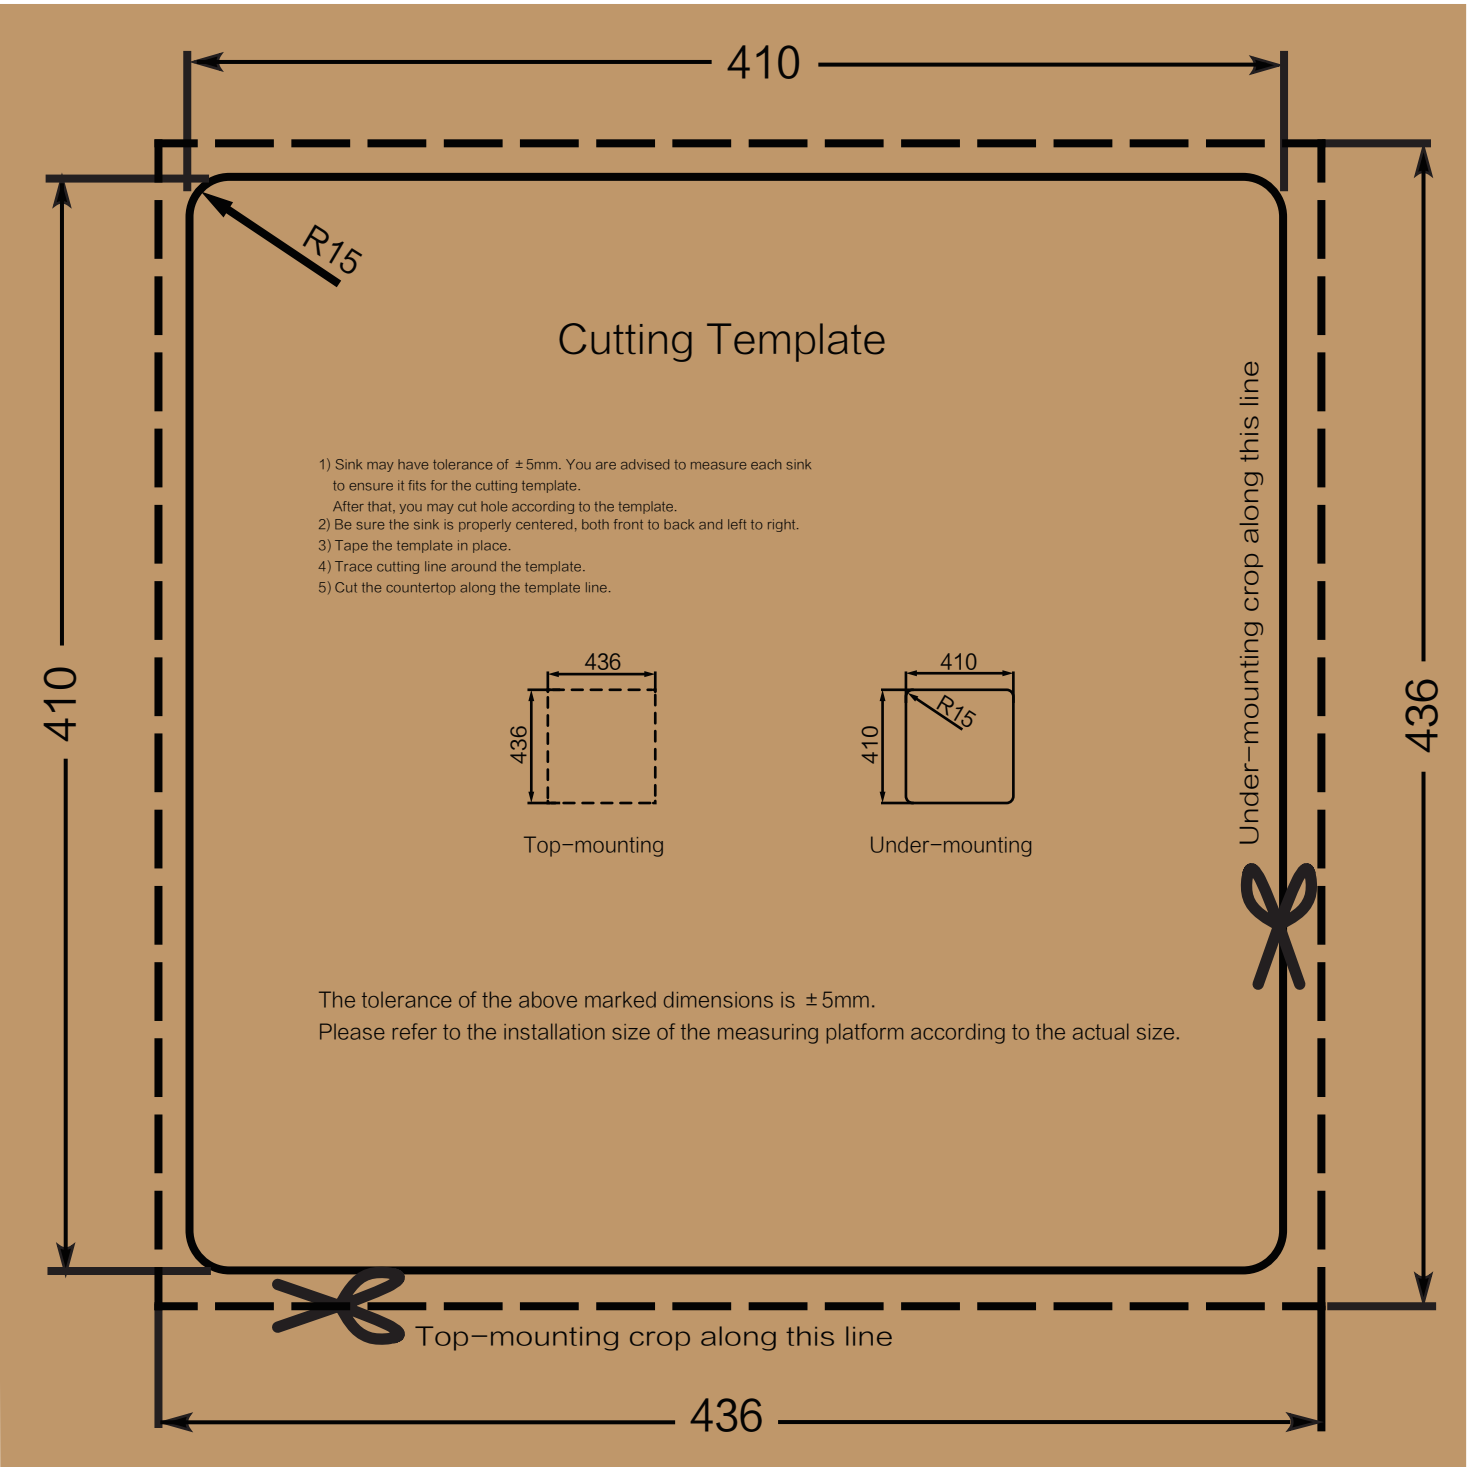

410
R15
Cutting Template
1) Sink may have tolerance of ±5mm. You are advised to measure each sink
to ensure it fits for the cutting template.
After that, you may cut hole according to the template.
2) Be sure the sink is properly centered, both front to back and left to right.
3) Tape the template in place.
4) Trace cutting line around the template.
5) Cut the countertop along the template line.
436
436
Top-mounting
410
410
R15
Under-mounting
Under-mounting crop along this line
The tolerance of the above marked dimensions is ±5mm.
Please refer to the installation size of the measuring platform according to the actual size.
410
436
Top-mounting crop along this line
436