
Cutting Template

1) Sink may have tolerance of ±5mm. You are advised to measure each sink
   to ensure it fits for the cutting template.
   After that, you may cut hole according to the template.
2) Be sure the sink is properly centered, both front to back and left to right.
3) Tape the template in place.
4) Trace cutting line around the template.
5) Cut the countertop along the template line.

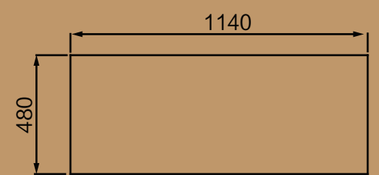

Top-mounting

The tolerance of the above marked dimensions is ±5mm.
Please refer to the installation size of the measuring platform according to the actual size.

Top-mounting crop along this line

480

1140