

Builder Budget Shower Rail

Nero

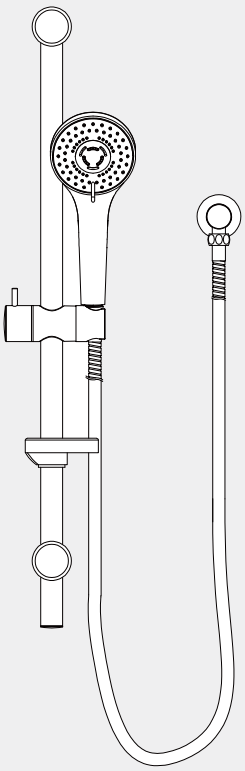

Versions:202603

Drawing

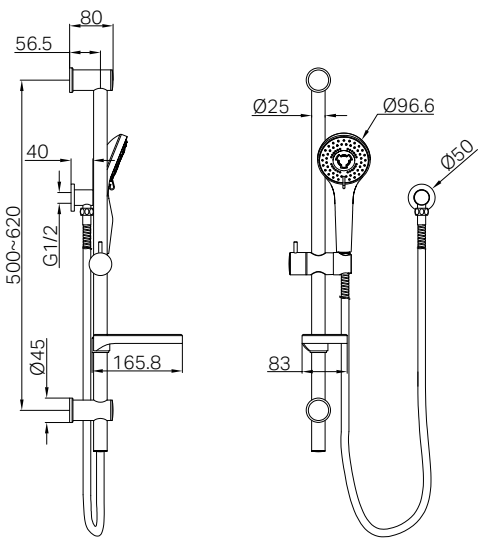

Specifications

Watermark License
WM-060093

Temperature Rating
Min 1˚C-Max 75˚C

Pressure Rating
Min 150kpa - Max 500kpa


Packaging Includes

1 x Hand Shower (Built- In Check Valve)
1 x Shower Hose
1 x Elbow
1 x Shower Rail

Finish & SKU


Chrome
NR315CH

*Dimensions are nominal measurements only.




use Teflon tape

1. Put Teflon tape on outlet thread.

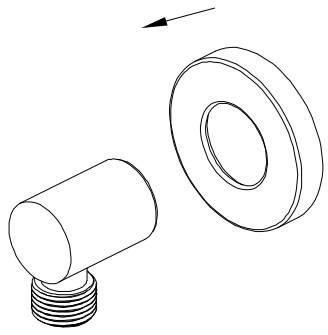


2. Pull dressing ring on the elbow body.

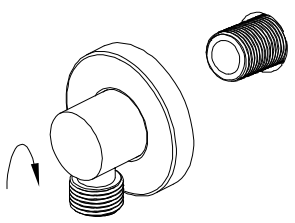


3. Screw elbow body on to outlet.




4. Drill two Ø6mm holes according to above picture.




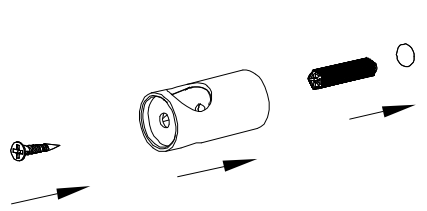


5. Mount bottom bracket on the Ø6 hole by expansion plug and tapping screw.

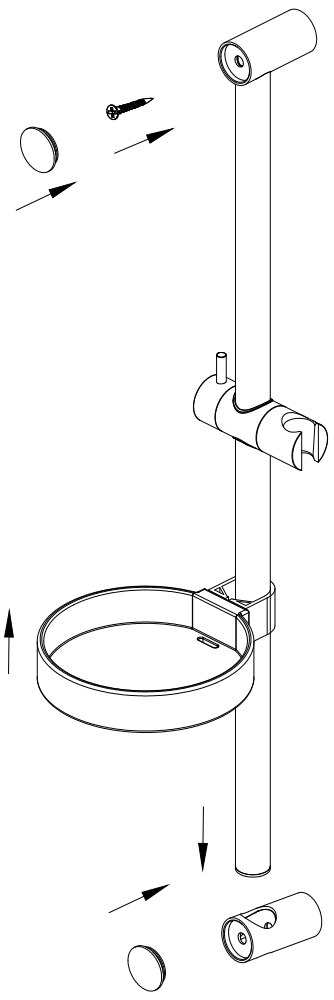

6. First,install the soap dish to the shower rail.Plug shower rail in bottom bracket. Mount top bracket on the top hole by expansion plug and tapping screw.Push plates onto two brackets.

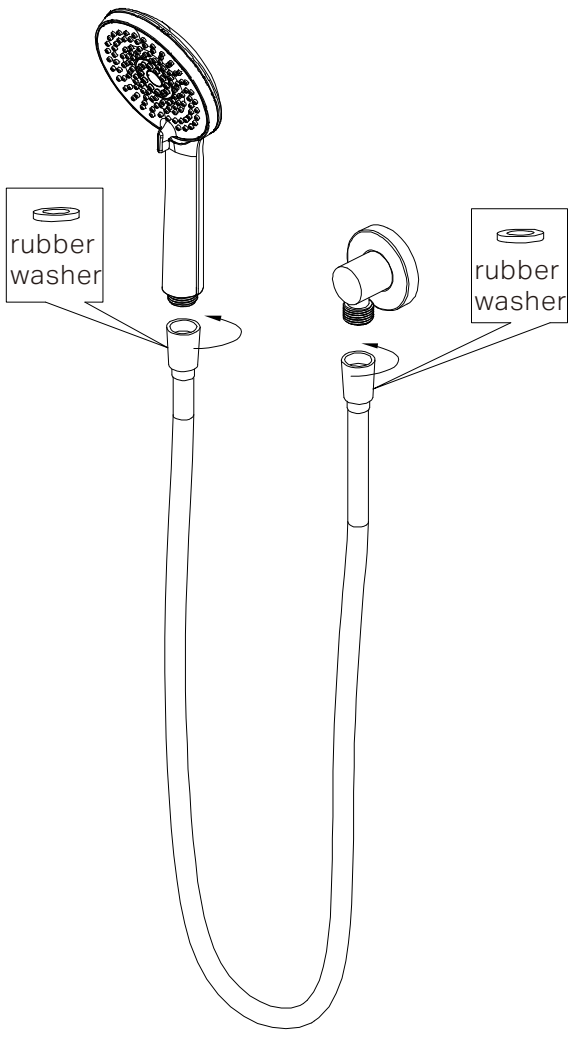

7. Connect hand shower with outlet by shower hose

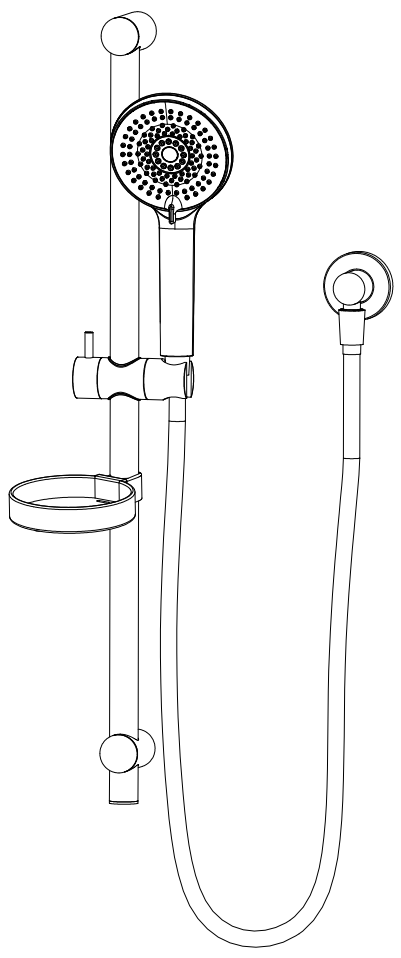

8. Test for leaks.

Nero

Warranty Policy